

Telephone:

Fax:

VAT Registration No.:

A16	ABS control module
H29	ABS warning lamp
A63	AC control module
S292	AC/heater function control panel
X93	Airbag spiral cable
G1	Alternator
B220	Ambient light sensor
H146	Apply brake pedal warning lamp
31	Battery -
30	Battery +
S414	Brake fluid level switch
H18	Brake fluid level warning lamp
M58	Central locking motor, boot lid/tailgate
M46	Central locking motor, driver
M47	Central locking motor, left rear
M48	Central locking motor, passenger
M49	Central locking motor, right rear
S6	Combination switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
A161-I	Digital multifunction display 1
A161-II	Digital multifunction display 2
EP1	Earth point 1
EP5	Earth point 5
EP7	Earth point 7
EP8	Earth point 8
S413	Electronic stability program (ESP) master switch
H121	Electronic stability program (ESP) warning lamp
A35	Engine control module (ECM)
P4	Engine coolant temperature (ECT) gauge
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
B86	Engine oil level sensor
S25	Engine oil pressure warning lamp switch
B156	Engine oil temperature sensor
S31	Fog lamp switch
H20	Fog lamps ON warning lamp, front or single
P3	Fuel gauge
B3	Fuel gauge tank sensor
H15	Fuel 'low' warning lamp
B82	Fuel/water separator sensor

F	Fuse
X28-II	Fuse box/relay plate - engine bay 1
X28-I	Fuse box/relay plate - fascia
A104	Glow plug control module
H25	Glow plug warning lamp
H17	Handbrake ON warning lamp
S35	Handbrake warning lamp switch
S27	Hazard warning lamps switch
H2	Headlamp high beam warning lamp
H55	Headlamp low beam ON warning lamp
S3	Headlamp switch
15	Ignition switch - ignition ON
S5	Indicator switch
H6	Indicator warning lamp, left or single
H7	Indicator warning lamp, right
A5	Instrument panel
A75	Instrumentation control module
A193	Multi switch assembly
A11-I	Multifunction control module 1
A11-II	Multifunction control module 2
S466	Parking aid deactivation switch
S32	Rear fog lamp switch
H21	Rear fog lamps ON warning lamp
S419	Seat belt contact switch, centre
S123	Seat belt contact switch, driver
S418	Seat belt contact switch, left rear
S122	Seat belt contact switch, passenger
B189	Seat occupation pressure sensor, passenger
A236	Steering column function control module
H111	Stop engine warning lamp
A198	Supplementary restraint system (SRS) control module
P7	Tachometer
A57	Transmission control module (TCM)
H27	Transmission shift warning lamp(s)
VAN	Vehicle area network
P9	Vehicle speedometer
B19	Wheel speed sensor, left front
B21	Wheel speed sensor, left rear or single
B20	Wheel speed sensor, right front
B22	Wheel speed sensor, right rear
S8	Windscreen wash/wipe switch
B203	Windscreen wiper rain sensor

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.



