

→ : CD signal line

→ : AM signal line □□□□ : FM signal line

→ : Playback signal line

→ : REC signal line

B MAIN(DECK) CIRCUIT (P.C.Board: on pages 28,29)

