
 
 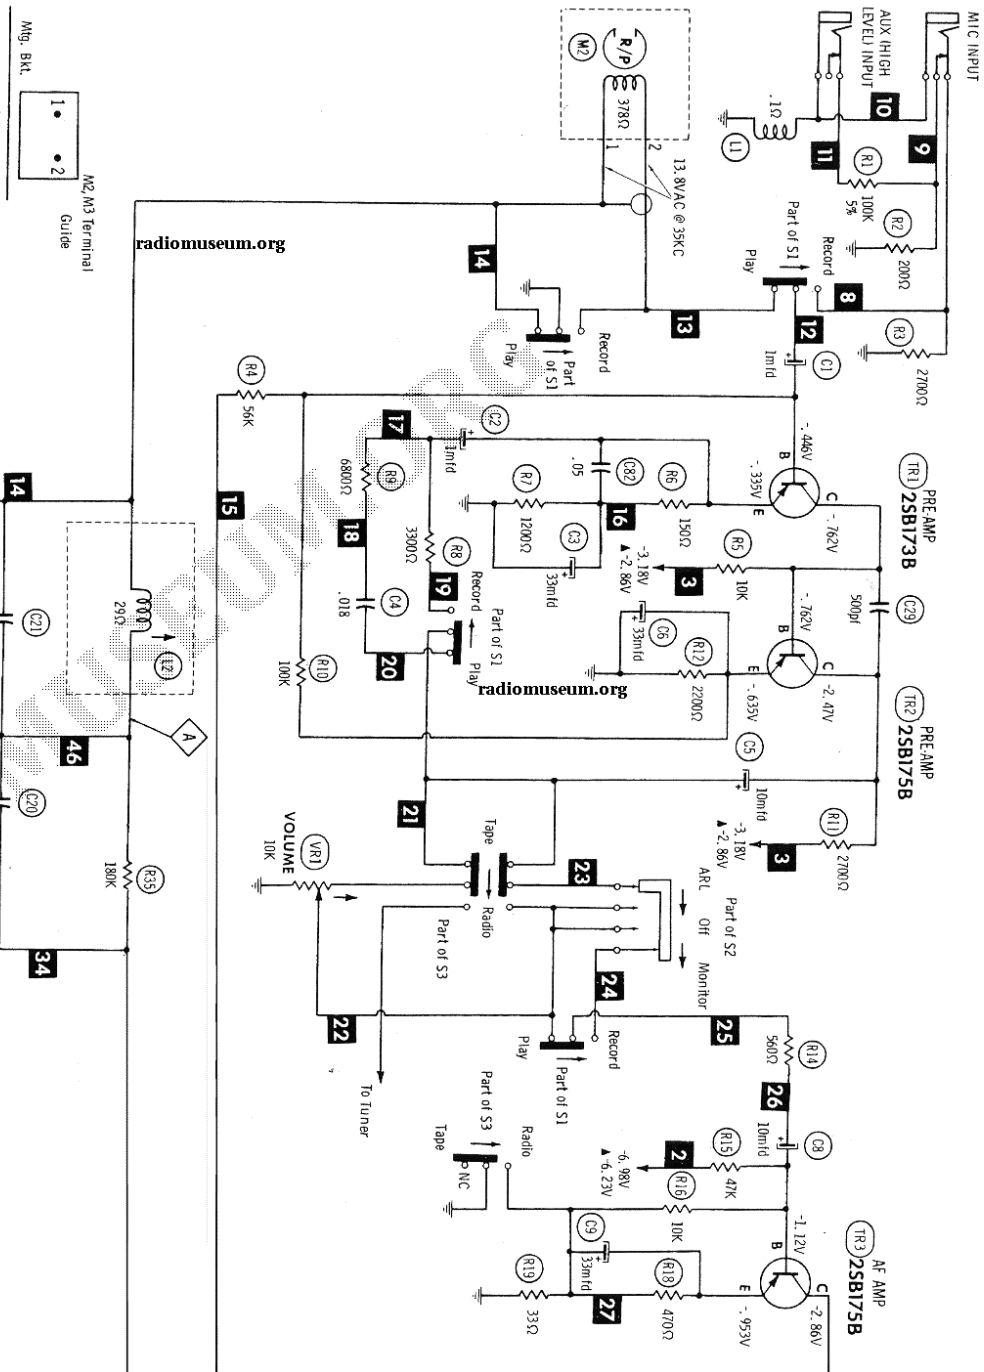


PANASONIC MODEL RQ-232S

NOTE: DEMAGNETIZE HEADS AFTER SERVICING RECORDER



Transistor Terminal Guide



boruvka@centrum.cz

radiomuseum.org

- NC Denotes No connection
- Denotes chassis
- Denotes ground (Measurement reference unless otherwise indicated)
- Indicates connection used in some versions.
- * Indicates connection not used in some versions.
- Omitted in some versions.
- See parts list.
- ▲ All measurements taken in "Record" position unless otherwise indicated.
- ▲ Measured in "Record" position.
- ▲ Measured in "Play" position.
- ▲ Measured in "FM" position.
- ▲ Measured in "AM" position.
- ▲ Values shown in () are used in some applications.
- ▲ Resistors are 1/2W or less, 10% or 20%, unless otherwise indicated.
- ▲ Supply voltage maintained at rated value for measurements.
- ▲ Voltage and resistance measured with VTVM or equivalent meter.
- ▲ no signal applied and controls adjusted for normal operation.
- ▲ Controls viewed from actuator end. Arrow indicates clockwise rotation.
- ▲ Numbers assigned to terminals may not be found on the unit.
- ▲ Transistor resistances vary widely. No resistance measurements taken.

