




Step6: Fix the new NTC by using the aluminium adhesive tape.

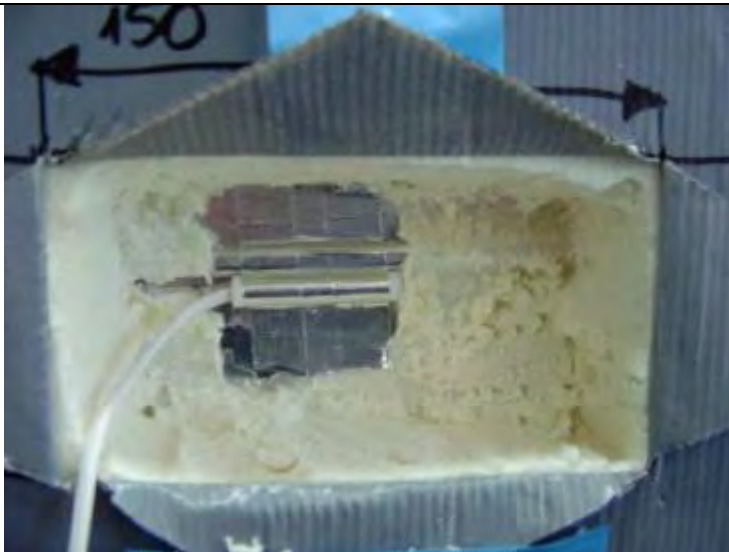


Step7: Fix the NTC wire by using the wire relief.







Step8: Remove the front panel and install the sensor wire under the top cover. Cut the old sensor wire and assembly the front panel.

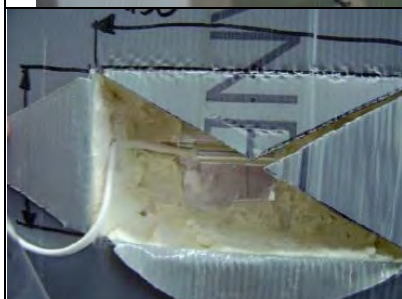

Step9: Close the "window" by using the foam and take care, that the wire of the sensor is placed in the bottom corner.

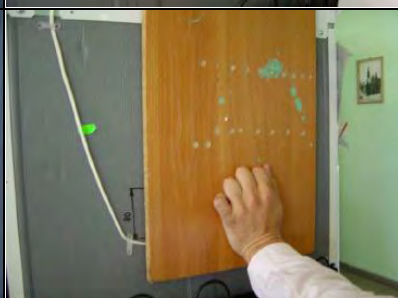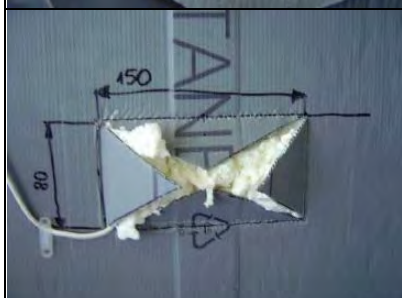

Step10: Close the poliwave and keep the surface flat.



Step11: Unstick the tape and remove the surplus of foam from this area.



Step12: Stick properly the poliwave on the cutted part.



Step13: Place the adhesive tape around the poliwave in order for a better sealing.



Step14: Make a final visible check for a proper grip of the tapes without air bulbs.

Name: Robert Zimmermann

Date: 04.04.2007

Mod. Date:

This documentation is only intended for qualified technicians who are aware of the respective safety regulations. Subject to modifications. © Copyright Whirlpool Corp. Service Consulting Center Europe